### LA-3260, LA-3560 and LA-3570 Sound Level Meter

Measure  $L_{\text{Aeq}}$  and  $L_{\text{AMAX}}$  (maximum value) and stores in MANUAL mode

ONO SOKKI CO., LTD.

### ONOSOKKI LA-3260, LA-3560, LA-3570 Sound Level Meter

### Measure $L_{Aeq}$ and $L_{AMAX}$ (maximum value) and stores in MANUAL mode

This manual describes the operation procedures to manually measure  $L_{Aeq}$  and  $L_{AMAX}$  for the interval of 10 minutes and store the resulting data on the display to the MANUAL memory, for the case of measuring the noise level at several locations sequentially one by one in a factory, as an example.

When LAeq is measured, LAMAX, Lx (percentile noise level), and other measurements are made at the same time.

\*  $L_{AMAX}$  is the maximum value of the instantaneous noise level  $L_A$ .

### Basic concept of operation

As it is typically the case, the LA-3000 series Sound Level Meter displays not only instantaneous values such as  $L_A$  on the screen, but also other calculated values including  $L_{Aeq}$ ,  $L_{AMAX}$ ,  $L_{MIN}$ , and  $L_N$ . The display of instantaneous measurement values will be updated every 1 second.

On the other hand, calculated values are displayed only after the {START} button is pressed, when it starts calculation using the "Measure Time" to be specified from a menu. In this document, these are distinguished by using the terms of "instantaneous measurement" and "calculated measurement".

In the following operation procedures, {} indicates a button on the panel, e.g., {MENU}, <> indicates each menu item, e.g., <MEAS>, and [] indicates the selected menu item, e.g., [Meas Time].

Measurement start time	At the time of pressing the {START} button
Total measurement time	10 minutes
Measurement time	10 minutes
Time weighting characteristics	FAST (factory default setting)
Frequency characteristics	A (factory default setting)

### Measurement condition

# **ΟΝΟ Ι**ΟΚΚΙ

### Buttons to be used in menu operation



- Pressing the {MENU} button on the measurement screen to open the menu screen. Press the {MENU} button again while the measurement screen is displayed, the screen is return to the measurement screen.
- Use the four arrow buttons, i.e., {F2} for down, {F3} for up, { < } for left, and { > } for right, to move the cursor to the item to be selected.
- 3. When entering a value, use the {F2} (down) and {F3} (up) buttons to select a numerical value and { < } and { > } buttons to select the digit.
- 4. Press the {ENTER} button to confirm the selected item and the setting value.

### Operation Procedures

### -1 Starting up in the factory default condition

This procedure starts up the device in the factory default setting. The setting is initialized to the frequency characteristic "A", time weighting characteristics "FAST", "instantaneous measurement", and "manual memory" configuration.

- (1) Press the {Power On} button ( O ) to turn on the device.
- (2) Press the {MENU} button to open the menu screen. The <MEAS> screen will open.

COND \ MEAS \	FILE \ I/F \
Measure	
Operate Mode	: Single
Meas Time	: 000:00:00.0
Interval Time	: 00:00
Total Time	: 000:00:00.0
Start Mode	: Manual
Memory Mode	: Manual
LN Set	: LO1,99
Record Setting	: Start
CANCEL 🗸 🗸	<u> </u>



(3) Press the  $\{<\}$  button to move to the <COND> menu to open the Condition screen.

COND \ MEAS \	FILE \ I/F \
Condition	
LCD Contrast	: 05
Date	: 11/12/19
Time	: 09:28
Light On Time	: Manual
Calibration	
Power On Cond	: OFF
Version/Option	
CANCEL 🗸 🗸	^

(4) Press the  $\{F2\}$  (down) button to move to the [Power On Cond] menu.

COND \ MEAS \	FILE \ I/F \
Condition	
LCD Contrast	: 05
Date	: 11/12/16
Time	: 09:11
Light On Time	: Manual
Calibration	
Power On Cond	: OFF
Version/Option	
CANCEL 🗸	^

(5) Press the {ENTER} button.

COND \	
Condition	>Power On Cond
Mode	: OFF
CANCEL	$\vee$ $\wedge$

(6) Select [Mode] and press the {ENTER} button.

COND MEAS FILE / I/F
Condition>Power On Cond>Mode
O File
O Last
• OFF

- (7) Press the  $\{F2\}$  (down) button to select [OFF] and press the  $\{ENTER\}$  button.
- (8) Press the {MENU} button again to return to the measurement screen.



(9) Press the {Power On} button ( $\bigcirc$ ) to turn off the device. Then, after a while, turn the power on again. The device will be started up in the factory default setup.



As the basic rule in the following procedures, use the arrow buttons, i.e.,  $\{<\}$ ,  $\{>\}$ ,  $\{F2\}$  (down), and  $\{F3\}$  (up), to move to the desired item or change the value and then press the  $\{ENTER\}$  button to confirm the setting.

#### -2 Clearing all data in the SD card

This procedure clears all the record files. This operation is not required when files are to be additionally saved in the SD card. Be careful as this operation will clear all data in the SD card.

(1) Press the {MENU} button to open the menu screen, select <FILE> and then [Format], and press the {ENTER} button.



When "ENTER or CANCEL" pop up window is displayed, press the {ENTER} button. The "The SD card is formatted" message will be displayed. This message means that all the files recorded in the SD card have been cleared.

CON	D MEAS FILE I/F
File	
Store	e Condition
Chec	Information
Dele	The SD card
Rese	is formatted.
Form	
Stor	
CANCE	

If the {F1} (cancel) button is pressed, the card will not be formatted.

(2) Press the {MENU} button to return to the measurement screen.



#### -3 Setting the measuring time to 10 minutes (10:00) and total time to 10 minutes (00:10:00)

(1) Press the {MENU} button to open the menu screen, select <MEAS>, [Meas Time], and set [000:10:00.0]. This operation will set the measurement time to 10 minutes.

COND MEAS FILE 1/F   Measure Operate Mode : Single   Measure : 000:00:00.0 Interval Time : 000:00:00.0   Interval Time : 000:00:00.0 Start Mode : Manual   Memory Mode : Manual LN Set : L01,99   Record Setting : Start	Press {ENTER} and use { > } to move to the digit of 10 minutes	LOND MEHS FILE 17F   Measure Operate Mode Single   Meas Time 000:00:00.0   Interval Time 000:00:00.0   Total Time 000:00:00.0   Start Mode Manual   Memory Mode Manual   LN Set : L01,99   Record Setting : Start		
	COND MERS FILE I/F   Measure Operate Mode Single   Meas Time 000:10:00.0   Interval Time 00:000:00.00   Total Time 000:00:00.00   Start Mode Manual   Memory Mode Manual   LN Set L01,99   Record Setting Start	Use {F2} (down) and {F3} (up) to set the value		

Press the {ENTER} button to complete the setting.

(2) In the menu screen, set [Total Time] to [000:10:00.0]. This operation will set the total time to 10 minutes. When this setting is used, the measurement will be automatically terminated after 10 minutes have passed.

COND MEAS	FILE \ I/F \	-	COND MEAS	FILE \ I/F \	-	COND \ MEAS \	FILE / I/F /
Measure			Measure			Measure	
Operate Mode	: Single		Operate Mode	: Single		Operate Mode	: Single
Meas Time	: 000:10:00.0		Meas Time	: 000:10:00.0		Meas Time	: 000:10:00.0
Interval Time	: 00:00		Interval Time	: 00:00		Interval Time	: 00:00
Total Time	: 000:00:00.0		Total Time	: 000:00:00.0		Total Time	: 000:00:00.0
Start Mode	: Manual		Start Mode	: Manual		Start Mode	: Manual
Memory Mode	: Manual		Memory Mode	: Manual		Memory Mode	: Manual
LN Set	: LO1,99		LN Set	: LO1,99		LN Set	: LO1,99
Record Setting	: Start		Record Setting	: Start		Record Setting	: Start
CANCEL 🗸 🗸	^		CANCEL 🗸 🗸	<u> </u>		CANCEL 🗸 🗸	<u>^</u>

Press the {ENTER} button to complete the setting.

Note: The "Interval Time" is not used here, and it remains "00:00".



### -4 Starting measurement

(1) Adjust the level range of the Sound Level Meter using the {LEVEL RANGE UP} and {LEVEL RANGE DOWN} buttons according to the actual noise level to be measured at the site. Select a level range where neither "UNDER" nor "OVER" is indicated.



If any "UNDER" or "OVER" condition has been present during measurement, it will be indicated when the device is operated to display calculated values.

(2) Press the {START} button to start measurement. The following "measurement ongoing" mark (PP) will be displayed.



(3) The measurement will be automatically terminated in 10 minutes, and the measurement mark will be cleared. Pressing the {PAUSE} button can stop the measurement at any time.

The {PAUSE} button has the function to temporarily suspend the measurement; pressing the {PAUSE} button again will resume and continue the measurement until the total time of 10 minutes has passed.

(4) To start a new measurement, press the {START} button. Any previous calculated measurements will be cleared.

# **ΟΝΟ Ι ΟΚΚΙ**

### -5 Displaying calculation measurement values

(1) Each time the {Lp/Leq/...} button are pressed, the calculated measurement value is switched to  $L_{Aeq}$ ,  $L_{AMAX}$ , and displayed.



### -6 List display

(1) Each time the {DISP} button is pressed, the display changes as shown below:





(2) When the display is showing a list, calculated measurement can be made by pressing the {START} button. In the case of "List 1" display, the  $L_A$ ,  $L_{Aeq}$ ,  $L_{AE}$ ,  $L_{AFmax}$ ,  $L_{Amin}$ , and  $L_{Apeak}$  values up to the current measurement time will be displayed.

/¶ 🗊	R	'11/12/19	12:06
AC DC		M>000	):00:12
MANUAL	A00001	••	
			[dB]
LAF	43.9	LAFmax	61.9
LAeq	46.4	LAFmin	38.4
LAE	56.8	LApeak	81.9
			PHONE

### -7 Manual operation to store calculation measurement values

(1) Make sure that "MANUAL" is indicated (i.e., manual save mode) on the display as in the following figure:



(2) Press the {STORE} button. The "data saving" mark will temporarily appear on the top of the screen and the data will be saved.

#### -8 Repeating measurement

- (1) Press the {START} button to start the next measurement.
- (2) Press the {STORE} button to save the data.

### -9 Reproducing (display) of data manually stored

(1) Press the {RECALL} button to open the menu screen, select [Load Data], and press the {ENTER} button. Select the data to be displayed using the {F2} / {F3} (down/up) buttons and press the {Enter} button.

Recal	Menu	<00001/00001>
Load	Data	
Load (	Condition	
Load B	EZ1:LAeq,	LCpeak
Load B	EZZ:Record	(*opt)
Load B	EZ3:Loggir	ng+Meas(*opt)
Load B	EZ4:NC(*op	ot)
Load B	EZ5:Reserv	/ed
CANCEL	$\sim$	$\land$

Press {ENTER}, and

select data item by {F2} (down) and {F3} (up)

Select Data SNGL-MANUA	<00001/00001> A00003-11121912403	) 1
DINGE-MANUA	400002-11121912403	2
SNGL-MANUA	100001-11121912345	5
		••••
		••••
CANCEL 🗸 🗸		



(2) Upon returning to the measurement screen, recall mark and the file name will be displayed. It indicates that the display is showing the recalled data.



- (3) You can switch to the list display by pressing the {DISP} button.
- (4) Pressing the {RECALL} button will clear the file name and it returns to the measurement screen.

### -10 Starting up the system with the saved setting condition at the last power off

The following steps are used to automatically recall and set the current measurement condition when power is turned on the next time.

(1) Press the {MENU} button to open the menu screen. The <MEAS> screen will open.

COND \ MEAS \	FILE \ I/F \
Measure	
Operate Mode	: Single
Meas Time	: 000:00:00.0
Interval Time	: 00:00
Total Time	: 000:00:00.0
Start Mode	: Manual
Memory Mode	: Manual
LN Set	: LO1,99
Record Setting	: Start
CANCEL V	$\wedge$

(2) Press the {<} button to move to the <COND> menu to open the Condition screen.

	FILE \ I/F \
Condition	
LCD Contrast	: 05
Date	: 11/12/19
Time	: 09:28
Light On Time	: Manual
Calibration	
Power On Cond	: OFF
Version/Option	

## **ΟΝΟ Ι ΟΚΚΙ**

(3) Press the  $\{F2\}$  (down) button to move to the [Power On Cond].

COND \MEAS \_	FILE \ I/F \
Condition	
LCD Contrast	: 05
Date	: 11/12/16
Time	: 09:11
Light On Time	: Manual
Calibration	
Power On Cond	: OFF
Version/Option	
CANCEL 🗸	^

- (4) Press the {ENTER} button.
- (5) Select [Mode] and press the {ENTER} button.


(6) Press the  $\{F2\}$  (down) button to select [Last] and press the  $\{ENTER\}$  button.

COND \ MEAS \ FILE \ I/F \
Condition>Power On Cond>Mode
O File
🛛 Last
o OFF
CANCEL V A

### опо боккі

### -11 Loading stored data to a personal computer

Two methods are available for connecting to a personal computer, i.e., one is to use a USB cable (A - miniB), as an external storage device (removable disk), and the other is to directly read the content of the SD card.

### <Loading data from the Sound Level Meter as an external storage device>



(1) Press the {MENU} button to open the menu screen, select <I/F> and [USB Mass Storage], and press the {ENTER} button. "USB Mass Storage ON" is displayed on a screen.



(2) Use a USB cable to connect the Sound Level Meter to the PC.

The files are stored in the CSV format.

End