


Accelerometer


Connection diagram

NP-500/3000/7000 Series (Built-in preamplifier type)


Models with * have been already discontinued.

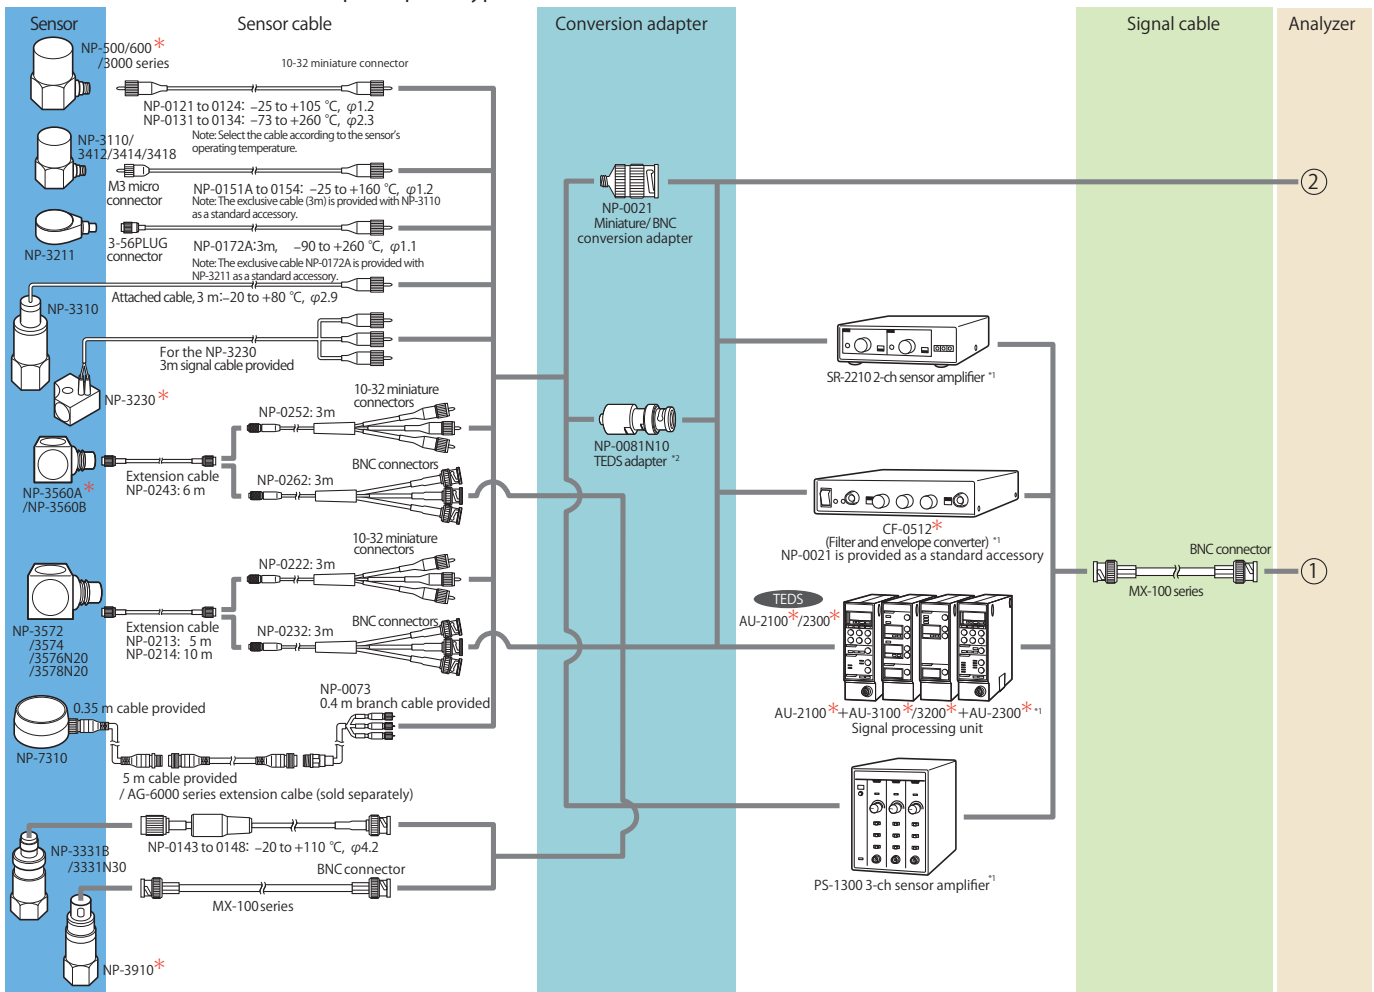

NP-2000 Series (Charge output type)

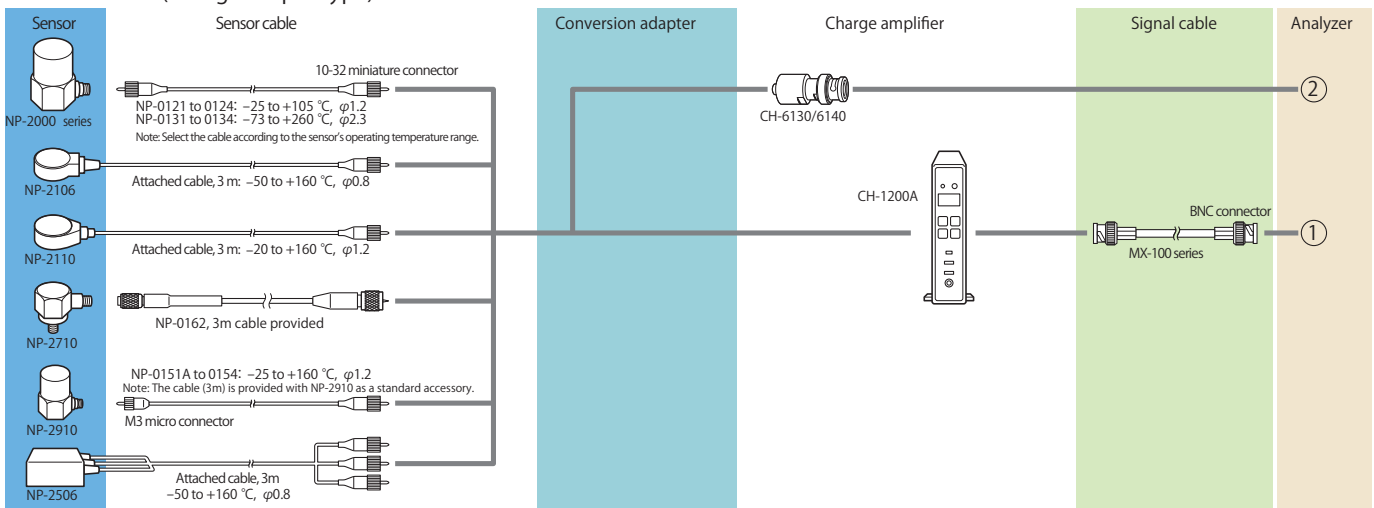

Analyzers

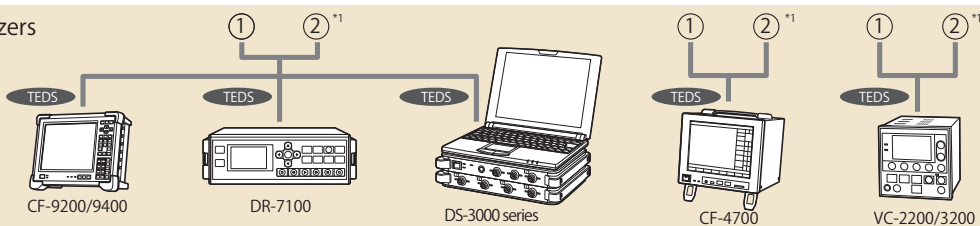

① : Voltage input (BNC connector) ② : Sensor input (BNC connector)^{*1}

^{*1}: Cannot be used with the NP-500 series. (There are some exceptions)

^{*2}: NP-0081N10 connects TEDS amplifier and the sensor which is not applicable to TEDS.